

Quick Reference Card

Application: CONFIG 690 01.07.00

NOTE: These procedures must be followed or fuel information will not appear on the receipt.

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
FUEL SETUP PROCEDURES	1. FUEL GRADE NOT SETUP SETUP NOW?	1. Press [ENTER], follow procedures that begin on step 8 of this card.

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
EDITING EXISTING FUEL SETTINGS	1. SWIPE CARD FOR SALE	1. To edit existing fuel settings, press the [#] key.
	2. LOCK MGMT SETUP	2. Press the right [▲] key.
	3. HOST LOCAL REVIEW	3. Press the middle [▲] key.
	4. DIAL PASS OPTIONS	4. Press the right [▲] key.
	5. PRINTER TIP OTHER	5. Press the right [▲] key.
	6. FUEL MISC	6. Press the left [▲] key.
	7. EDIT PRINT	7. Press the left [▲] key.

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
ENTERING FUEL GRADE NAMES AND AMOUNTS	8. 1: \$0.000/G CHANGE GRADE DATA?	8. Press [ENTER] to program fuel grade 1 or press [BACK SPACE] to program next grade.
	NOTE: To enter an alphabetic letter, press the [ALPHA] key, then the key for that letter.	

9. GRADE 1 NAME: ENTER GRADE NAME	9. Key in grade name (using up to eight characters) press [ENTER] or press [ENTER] to keep existing grade name.
10. GRADE 1 PRICE/GAL: ENTER PRICE/GAL	10. Key in the grade 1 fuel price per unit (using up to six numbers), press [ENTER] or press [ENTER] to keep existing price.

EXAMPLE: To enter \$2.599 press [2] [5] [9] [9], press [ENTER].

11. 2: \$0.000/G CHANGE GRADE DATA?	11. Press [ENTER] to program fuel grade 2 or press [BACK SPACE] to program next grade.
12. GRADE 2 NAME: ENTER GRADE NAME	12. Key in the grade name (using up to eight characters) and press [ENTER] or press [ENTER] to keep existing grade name.
13. GRADE 2 PRICE/GAL: ENTER PRICE/GAL	13. Key in the grade 2 fuel price per unit (using up to six numbers), press [ENTER] or press [ENTER] to keep existing price.
14. 3: \$0.000/G CHANGE GRADE DATA?	14. Press [ENTER] to program fuel grade 3 or press [BACK SPACE] to program next grade.
15. GRADE 3 NAME: ENTER GRADE NAME	15. Key in the grade name (using up to eight characters) and press [ENTER] or press [ENTER] to keep existing grade name.
16. GRADE 3 PRICE/GAL: ENTER PRICE/GAL	16. Key in the grade 3 fuel price per unit (using up to six numbers), press [ENTER] or press [ENTER] to keep existing price.
17. 4: \$0.000/G CHANGE GRADE DATA?	17. Press [ENTER] to program fuel grade 4 or press [BACK SPACE] to program next grade.
18. GRADE 4 NAME ENTER GRADE NAME	18. Key in the grade name (using up to eight characters) and press [ENTER] or press [ENTER] to keep existing grade name.
19. GRADE 4 PRICE/GAL: ENTER PRICE/GAL	19. Key in the grade 4 fuel price per unit (using up to six numbers), press [ENTER] or press [ENTER] to keep existing price.
20. 5: \$0.000/G CHANGE GRADE DATA?	20. Press [ENTER] to program fuel grade 5 or press [BACK SPACE] to exit.
21. GRADE 5 NAME: ENTER PRICE/GAL	21. Key in the grade name (using up to eight characters) and press [ENTER] or press [ENTER] to keep existing grade name.
22. GRADE 5 PRICE/GAL: ENTER PRICE/GAL	22. Key in the grade 5 fuel price per unit (using up to six numbers), press [ENTER] or press [ENTER] to keep existing price.
23. CHANGE ACCEPTED	23. Please wait...
24. CHANGE ACCEPTED PRINTING...	24. The terminal prints a fuel information report.
25. EDIT PRINT	25. Press the left [▲] key to continue editing the fuel grades or press the right [▲] key to print another copy of the Fuel Grade Setup Report. Press [CLEAR] to exit function.