

# LinkPoint All-In-One Electronic Benefits Transfer Quick Reference Card



Application: L3FRR33

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
EBT CASH BENEFIT PURCHASE	1. READY XXX	1. Press [ATM/DEBIT].
	2. ENTER PASSWORD (optional)	2. Key in the password and press [ENTER].
	3. 1) MERCH NAME <-- YES --> (optional)	3. If your merchant profile displays, press the middle [▲] key; if not, press the right or left [▲] key until your profile displays, then press the middle [▲] key.
	4. EBT DEBIT	4. Press the left [▲] key.
	5. FOOD CASH VCHR	5. Press the middle [▲] key.
	6. SALE BAL	6. Press the left [▲] key.
	7. OPER ID (optional)	7. Key in the employee ID and press [ENTER].
	8. SALE AMOUNT	8. Key in the sale amount and press [ENTER].
	9. CONFIRM AMOUNT (optional)	9. Key in the amount again and press [ENTER].
	10. TAX AMOUNT (optional)	10. Key in the tax amount and press [ENTER].
	11. CASH BACK AMOUNT (optional)	11. Key in cash back amount, press [ENTER].
	12. INVOICE NUMBER (optional)	12. Key in invoice number, press [ENTER].
	13. ENTER ACCOUNT #	13. Swipe the card through the card reader.
	14. WAITING FOR PIN	14. Customer enter PIN on PIN pad.
	<b>PIN PAD DISPLAY</b>	<b>PIN PAD ACTION</b>
	15. AMOUNT \$XX.XX...	15. Cust. keys PIN on PINpad, presses [ENTER].
	16. DIALING...CONNECTED	16. Please wait...
	17. AUTH/TKT XXXXXX	17. Please wait for the merchant receipt to print.
	18. TEAR NOW, PRESS ENTER	18. Press [ENTER] to print customer receipt.

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
EBT CASH BENEFIT BALANCE INQUIRY	1. READY XXX	1. Press [ATM/DEBIT].
	2. ENTER PASSWORD (optional)	2. Key in the password and press [ENTER].
	3. 1) MERCH NAME <-- YES --> (optional)	3. If your merchant profile displays, press the middle [▲] key; if not, press the right or left [▲] key until your profile displays, then press the middle [▲] key.
	4. EBT DEBIT	4. Press the left [▲] key.
	5. FOOD CASH VCHR	5. Press the middle [▲] key.
	6. SALE BAL	6. Press the right [▲] key.
	7. OPER ID (optional)	7. Key in the employee ID and press [ENTER].
	8. ENTER ACCOUNT #	8. Swipe the card through the card reader or key in the account number and press [ENTER].
	9. WAITING FOR PIN	9. Please wait...
	<b>PIN PAD DISPLAY</b>	<b>PIN PAD ACTION</b>
	10. AMOUNT \$XX.XX...	10. Cust. keys PIN on PINpad, presses [ENTER].
	11. DIALING...CONNECTED	11. Please wait...
	12. BALANCE VERIFIED	12. Please wait for merchant receipt to print.
	13. TEAR NOW, PRESS ENTER	13. Press [ENTER] to print customer receipt.

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
EBT FOOD STAMP PURCHASE	1. READY XXX	1. Press [ATM/DEBIT].
	2. ENTER PASSWORD (optional)	2. Key in the password and press [ENTER].
	3. 1) MERCH NAME <-- YES --> (optional)	3. If your merchant profile displays, press the middle [▲] key; if not, press the right or left [▲] key until your profile displays, then press the middle [▲] key.
	4. EBT DEBIT	4. Press the left [▲] key.
	5. FOOD CASH VCHR	5. Press the left [▲] key.
	6. SALE RET BAL	6. Press the left [▲] key.
	7. OPER ID (optional)	7. Key in the employee ID and press [ENTER].
	8. SALE AMOUNT	8. Key in the total amount and press [ENTER].
	9. CONFIRM AMOUNT (optional)	9. Key in the amount again and press [ENTER].
	10. TAX AMOUNT (optional)	10. Key in the tax amount and press [ENTER].
	11. INVOICE NUMBER (optional)	11. Key in invoice number, press [ENTER].
	12. ENTER ACCOUNT #	12. Swipe the card through the card reader or key in the account number and press [ENTER].
	13. WAITING FOR PIN	13. Please wait...
	<b>PIN PAD DISPLAY</b>	<b>PIN PAD ACTION</b>
	14. AMOUNT \$XX.XX...	14. Cust. keys PIN on PINpad, presses [ENTER].
	15. DIALING...CONNECTED	15. Please wait...
	16. AUTH/TKT XXXXXX	16. Please wait for the merchant receipt to print.
	17. TEAR NOW, PRESS ENTER	17. Press [ENTER] to print customer receipt.

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION	
<b>EBT FOOD STAMP AND VOUCHER RETURN</b>	1. READY XXX	1. Press <b>[ATM/DEBIT]</b> .	
	2. ENTER PASSWORD <i>(optional)</i>	2. Key in the password and press <b>[ENTER]</b> .	
	3. 1) MERCH NAME <-- YES --> <i>(optional)</i>	3. If your merchant profile displays, press middle <b>[▲]</b> key; if not, press right or left <b>[▲]</b> key until your profile displays; press middle <b>[▲]</b> key.	
	4. EBT           DEBIT	4. Press the left <b>[▲]</b> key.	
	<b>FOOD STAMP RETURN PROCEDURES</b>		
	5. FOOD CASH VCHR	5. Press the left <b>[▲]</b> key.	
	6. SALE RET BAL	6. Press the middle <b>[▲]</b> key.	
	7. OPER ID <i>(optional)</i>	7. Key in the employee ID and press <b>[ENTER]</b> .	
	8. RETURN AMOUNT	8. Key in the return amount and press <b>[ENTER]</b> .	
	9. CONFIRM AMOUNT <i>(optional)</i>	9. Key in the amount again and press <b>[ENTER]</b> .	
	10. ENTER ACCOUNT #	10. Swipe the card through the card reader.	
11. WAITING FOR PIN	11. Please wait...		

PIN PAD DISPLAY	PIN PAD ACTION
12. AMOUNT \$XX.XX...	12. Cust. keys PIN on PINpad, presses <b>[ENTER]</b> .
13. DIALING...CONNECTED	13. Please wait...
14. APPROVAL XXX	14. Please wait for merchant receipt to print.
15. TEAR NOW, PRESS ENTER	15. Press <b>[ENTER]</b> to print customer receipt.

<b>VOUCHER RETURN PROCEDURES</b>		
5. FOOD CASH VCHR	5. Press the right <b>[▲]</b> key.	
6. SALE RET	6. Press the middle <b>[▲]</b> key.	
7. VOUCHER NUMBER	7. Key in voucher number, press <b>[ENTER]</b> .	
8. OPER ID <i>(optional)</i>	8. Key in the employee ID and press <b>[ENTER]</b> .	
9. RETURN AMOUNT	9. Key in the return amount and press <b>[ENTER]</b> .	
10. CONFIRM AMOUNT <i>(optional)</i>	10. Key in the amount again and press <b>[ENTER]</b> .	
11. ENTER ACCOUNT #	11. Swipe the card through the card reader or key in the account number and press <b>[ENTER]</b> .	
12. AUTH CODE	12. Key in auth code, press <b>[ENTER]</b> .	
13. DIALING...CONNECTED	13. Please wait...	
14. APPROVAL XXXXX	14. Please wait for merchant receipt to print.	
15. TEAR NOW, PRESS ENTER	15. Press <b>[ENTER]</b> to print customer receipt.	

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
<b>EBT FOOD STAMP BALANCE INQUIRY</b>	1. READY XXX	1. Press <b>[ATM/DEBIT]</b> .
	2. ENTER PASSWORD <i>(optional)</i>	2. Key in the password and press <b>[ENTER]</b> .
	3. 1) MERCH NAME <-- YES --> <i>(optional)</i>	3. If your merchant profile displays, press middle <b>[▲]</b> key; if not, press right or left <b>[▲]</b> key until your profile displays; press middle <b>[▲]</b> key.
	4. EBT           DEBIT	4. Press the left <b>[▲]</b> key.
	5. FOOD CASH VCHR	5. Press the left <b>[▲]</b> key.
	6. SALE RET BAL	6. Press the right <b>[▲]</b> key.
	7. OPER ID <i>(optional)</i>	7. Key in the employee ID and press <b>[ENTER]</b> .
	8. ENTER ACCOUNT #	8. Swipe the card through the card reader.
	9. WAITING FOR PIN	9. Please wait...

PIN PAD DISPLAY	PIN PAD ACTION
10. AMOUNT \$XX.XX...	10. Cust. keys PIN on PINpad, presses <b>[ENTER]</b> .
11. DIALING...CONNECTED	11. Please wait...
12. BALANCE VERIFIED	12. Please wait for merchant receipt to print.
13. TEAR NOW, PRESS ENTER	13. Press <b>[ENTER]</b> to print customer receipt.

FUNCTION	DISPLAY MESSAGE	OPERATOR ACTION
<b>EBT VOUCHER FORCE PURCHASE</b>	1. READY XXX	1. Press <b>[ATM/DEBIT]</b> .
	2. ENTER PASSWORD <i>(optional)</i>	2. Key in the password and press <b>[ENTER]</b> .
	3. 1) MERCH NAME <-- YES --> <i>(optional)</i>	3. If your merchant profile displays, press middle <b>[▲]</b> key; if not, press right or left <b>[▲]</b> key until your profile displays; press middle <b>[▲]</b> key.
	4. EBT           DEBIT	4. Press the left <b>[▲]</b> key.
	5. FOOD CASH VCHR	5. Press the right <b>[▲]</b> key.
	6. SALE RET	6. Press the left <b>[▲]</b> key.
	7. VOUCHER NUMBER	7. Key in the voucher number, press <b>[ENTER]</b> .
	8. OPER ID <i>(optional)</i>	8. Key in the employee ID and press <b>[ENTER]</b> .
	9. SALE AMOUNT	9. Key in the sale amount, press <b>[ENTER]</b> .
	10. CONFIRM AMOUNT <i>(optional)</i>	10. Key in the amount again and press <b>[ENTER]</b> .
	11. TAX AMOUNT <i>(optional)</i>	11. Key in the tax amount and press <b>[ENTER]</b> .
	12. INVOICE NUMBER <i>(optional)</i>	12. Key in invoice number, press <b>[ENTER]</b> .
	13. ENTER ACCOUNT #	13. Swipe or key in card number, press <b>[ENTER]</b> .
	14. AUTH CODE	14. Key in auth code, press <b>[ENTER]</b> .
	15. DIALING...CONNECTED	15. Please wait...
	16. AUTH/TKT XXXXXX	16. Please wait for merchant receipt to print.
	17. TEAR NOW, PRESS ENTER	17. Press <b>[ENTER]</b> to print customer receipt.