

LinkPoint 9000 Tips

The LinkPoint 9000 uses a rechargeable nickel cadmium battery as its main power source. Please note that a new nickel cadmium battery's full performance is achieved only after two complete charge and discharge cycles. After you charge a battery for the first time, please use that battery completely before recharging it. Then, use the battery completely before recharging it again. For maximum performance, please continue to use battery fully before recharging in the future.

To charge the LinkPoint 9000 battery:

1. Unpack the charging dock and place on a table or counter top as shown in Figure 1.



Figure 1

2. Plug the adapter pin into the back of the unit as shown in Figure 2. Plug the adapter cord into either a surge protector or a wall power outlet.



Figure 2

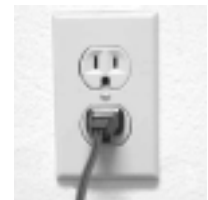


Figure 3

3. Charge the battery by either:

◆ Placing the battery into the small charger slot on the base as shown in Figure 4 (when battery is charged, press the eject button to release battery); or

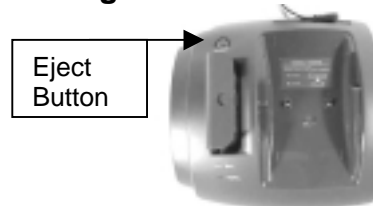


Figure 4

◆ Turn the terminal over and slide the uncharged battery into the terminal. Snap the battery into place as shown in Figure 5.



Figure 5

◆ Place the terminal on the large charger slot as shown in Figure 6. Make sure terminal power is off or the unit will not charge. **Never operate terminal while it is on charging dock, because it will shorten battery life!**

Figure 6

4. No matter which method you choose, charge the battery until the appropriate charge indicator light turns green as shown in Figure 7.

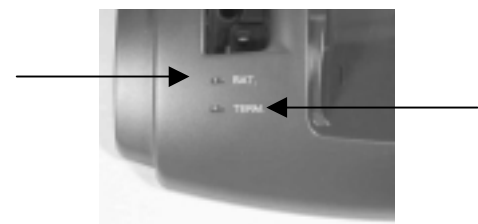


Figure 7

LinkPoint 9000 Tips

To Load Paper:

1. **Open the paper cover** by holding the paper cover tabs and pulling them up towards you.



Figure 8

2. **Drop in the paper roll.** Note that the paper should rest on top of the serrated tear bar as shown in Figure 10.



Figure 9



Figure 10

3. **Close the paper cover** until it snaps shut and tear off any excess paper as shown in Figures 11 and 12.



Figure 11



Figure 12

4. **Turn terminal on to test** that paper roll was inserted properly by pressing the [ON/OFF] button as shown in Figure 13. When terminal is turned on you should hear a beep and see the "SWIPE CARD" display. Once you see the display, press the [FORM FEED] button and if a blank portion of paper advances, it was loaded correctly. **Never operate terminal while it is on charging dock, because it will shorten battery life!**



Figure 13

Note: Thermal paper quality has a direct impact on the performance of thermal printers. The LinkPoint 9000 has a thermal printer built into the unit. For best results, LinkPoint International strongly recommends the use of Appleton 1012 or equivalent grade paper.